




## INTRODUCTION


## How to Monitor all the DC systems in your office

To be able to monitor all the DC systems and set system parameters; Firstly, We will give you an account on our management system then you will install SIM card in the DC systems and automatically the devices will show on the management platform.

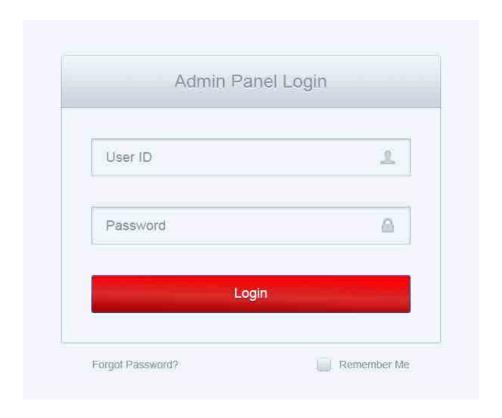

### How to set installment function

Each machine has a Device number, after you log in, click "All Equipment", Then search for the device number you need to set.

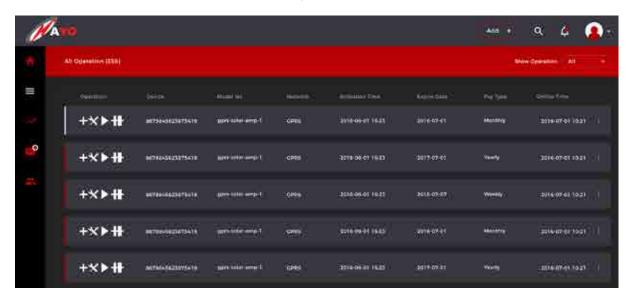



#### Note:

- means Renew information
- means parameter of the system
- means on-off operation
- means unbind the system after user pay all the money

  Next, click "

  " icon and set, then save.

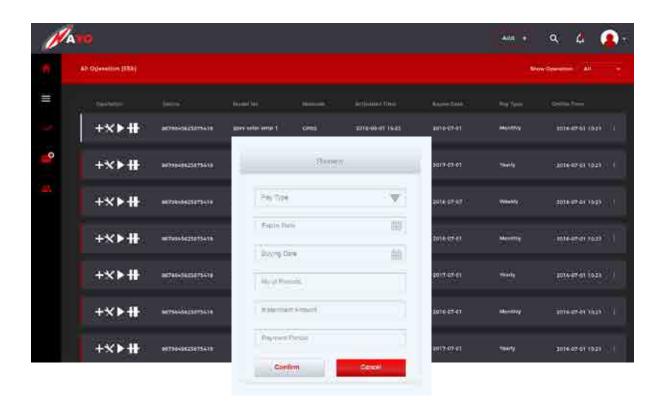

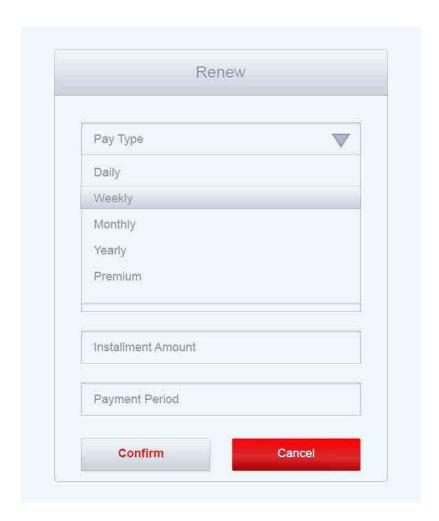


# You can set the following parameters:

Payment type: forever, daily, weekly, monthly, yearly and so on. Expiration date, Buying date, No of Periods, Installment amount, Payment Period.

## **Dual Payment Options**


**Local Agent:** The user visits the Local agent's shop for payment and activation.

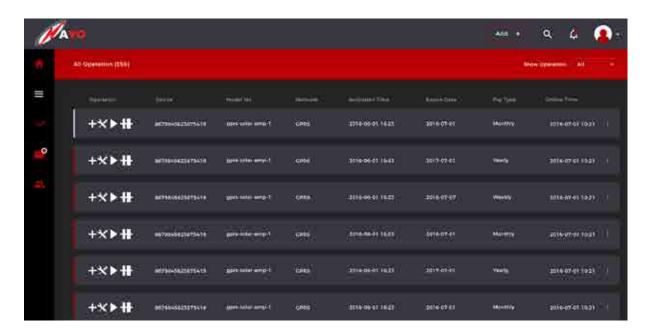

**Mobile Money:** The User can pay and activate His account via USSD mobile banking on any local GSM network. Payment can also be made on-line through inter-switch, verve, visa, remitta or any on-line banking platform.

We will link your account to your preferred payment model.

**User Personal Control:** The user personal control app can be installed on any andriod or IOS device. The app informs the user on his power status and can also be used to remotely control the system.

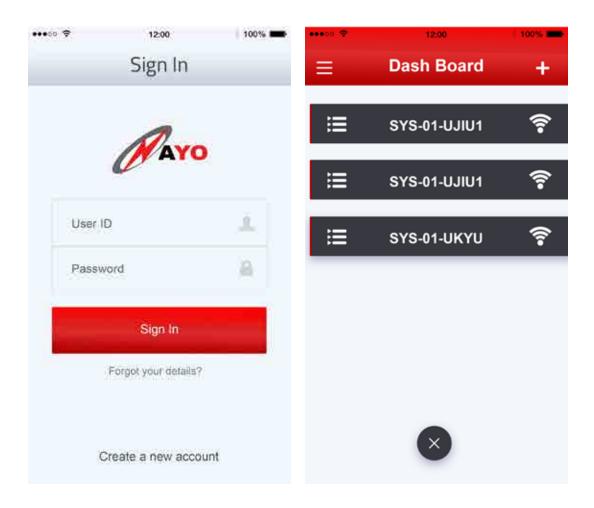

when a User needs to recharge, our APP will send the user an SMS notification. If the users fails to recharge before the expiring date, the system will automatically disconnect power supply and will reconnect power supply after the next recharge/payment.



First Floor, Theodak Plaza, National Hospital Drive, Central Business District Abuja. +234-8071091966, +234-8093745193 nayotechnology.com | info@nayotechnology.com